


## TECHNICAL DATA SHEET

### SECUNORM PROFI LIGHT NO. 123001

#### Safety technology

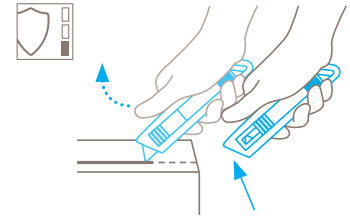

#### Automatic blade retraction – a high degree of safety

The automatic blade retraction of the SECUNORM PROFI LIGHT guarantees a high degree of safety from cut injuries. As soon as you have started to cut, take your thumb off the slider. The blade can thus withdraw back into the handle immediately after leaving the material being cut.



LIGHTWEIGHT SAFETY KNIFE FOR ALL NORMAL CUTTING JOBS. WITH AUTOMATIC BLADE RETRACTION.

Order No. 123001.02

#### The particularly light heavyweight. With trapezoid blade.

The SECUNORM PROFI LIGHT is a PROFI off-spring. With its plastic body, it is lighter than the others by several grams. But as far as cutting ability is concerned, it's a heavyweight. You can use this cutter for almost all purposes. A relatively large blade length makes it suitable for cutting all common materials. For an indefinite number of cuts. And for special requirements, considering the handle can accommodate various types of blades.

#### No abrasion

The SECUNORM PROFI LIGHT is made of a particularly abrasion resistant plastic. Stability and durability are the result of thoughtful design. Award-winning design, as a matter of fact.

#### At the press of a button

Changing the blade is simple. Press the blade change button and pull the plastic insert out of the cutter body. Change the blade, job done!

#### Double-sided slider


With the right hand? With the left hand? There's no need to ask this question! The SECUNORM PROFI LIGHT is fitted with a slider that's accessible from both sides. Choose for yourself!

#### Ergonomically light

The SECUNORM PROFI LIGHT is ergonomically shaped, as are all members of the PROFI family. It is however the lightest of the group. With its 43 grams, this cutter is also ergonomically light, making high cutting frequencies easy.





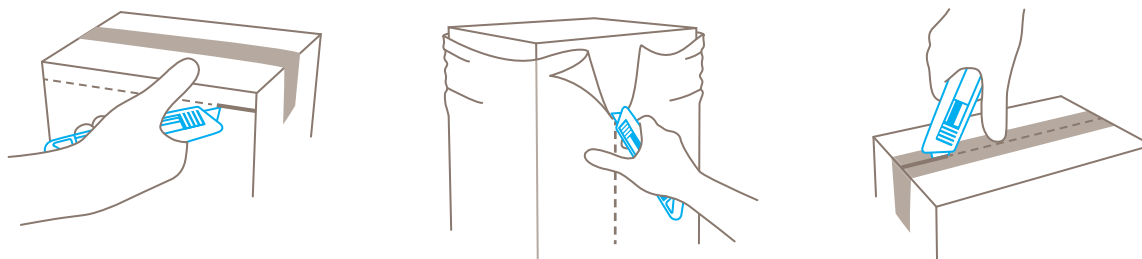





#### Double-sided blade

Before you need to change the quality blade, you have the chance to turn it over once. Usage time of the blade is doubled and fatigue is held at bay: with a simple flip of the blade, your SECUNORM PROFI LIGHT will cut like new again.











## PRODUCT FEATURES


### Technical features

 High safety	 Tool-less blade change	 Abrasion resistant	 Very ergonomic
 2-times usable blade	 Extended blade length	 Cutting depth	 For right and left hander
 Lanyard hole	 Printable for promotional purposes		

### Main cutting materials

 Cardboard: up to 2-ply	 Wrapping, stretch, and shrink foil	 Plastic strapping band	 Tape
 Bagged goods	 Layers of foil or paper	 Yarn, cord	 Textile, material

### Installed blade



**NR. 5232**  
0,63 mm, Breitschliff

### Optional blade



**NO. 52**  
0.63 mm



**NO. 5233**  
0.63 mm, 1-sided ground-edge



**NO. 65232**  
0.63 mm, rounded blade tips, deep-edged



**NO. 610**  
0.63 mm, stainless



**NO. 8852**  
0.63 mm, TiN coated



**NO. 852**  
0.63 mm, stainless, TiN coated



**NO. 85233**  
0.63 mm, 1-sided ground-edge, TiN coated




**NO. 56**  
0.63 mm




**NO. 5634**  
0.63 mm, rounded blade tips


## BLADE CHANGE

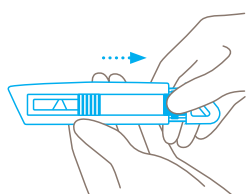


Press the blade-change button and **pull out the plastic insert**.

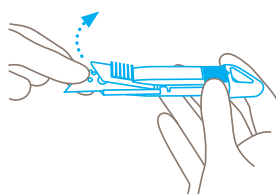

Take hold of the blade and nudge the blade cover open: either **rotate or replace** the blade.

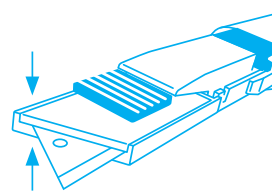

Be sure to close the blade cover so that it **lies flush** with the blade holder.

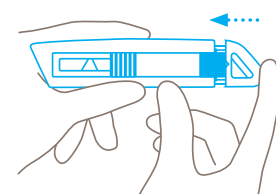

Finally, push the plastic insert back into the handle until you **hear it click into place**.

## SERVICES OFFERED



Safety poster



Training video



Technical data sheet



Consulting service

## PRODUCT AND PACKAGING DETAILS

Order No.	NO. 123001.02	Packaging unit	1 in single unit box
Knife size (L x W x H)	140 x 15.3 x 30 mm	Size Single unit box	144 x 22 x 38 mm
Weight knife	43.3 g	Weight single unit box	56.6 g
Basic material	Glass fibre reinforced plastic	EAN Code single unit box	4002632920363
Extended blade length	17 mm	Quantity in outer pack	10 knives
Cutting depth	15.5 mm	Weight outer pack	613.5 g
		EAN Code outer pack	4002632971686
		Customs tariff number	82119300

## SAFETY CERTIFICATE

Date of issue	09.12.2010
Certificate	GS certificate NO. S 60033010

### Certificates and awards



## ENVIRONMENT

This SECUNORM PROFI LIGHT corresponds with the current REACH ordinance.

## SECURITY ADVICE

To ensure that you use your new MARTOR knife safely and most effectively, please read and note the following user-instructions. Please keep the written guide in a safe place so that you can access it at any time.

**1. General application instructions:** Please use the product carefully for cutting work only and not for any purposes other than those that are intended. Please take the correct handling and the proper use of the knives into account in this regard.

**2. Special application instructions to avoid the danger of injuries:** Only use knives that are in perfect condition and have sharp, clean and undamaged blades. employ the utmost care when handling the knives.

**CAUTION:** The blade is sharp and can result in serious and deep cuts. Therefore, never reach into the blade! To reduce the danger of injuries, hold the hand that is being used to restrain and stabilise the cutting base in such a manner that the restraining hand or even other body parts are not endangered in the event that the knife slips.

**3. Replacement of spare parts:** Replace any blades that become dull at the right time! Use only the replacement blades

available at MARTOR for this purpose. Dispose of old blades in a proper fashion. They should not be placed in a waste paper bin, as this poses a considerable danger of injuries. Never perform any repairs yourself. If the knife displays signs of aging or other wear, e.g. function problems when changing the blade or in the handling of the blade pushers, then it must be rejected and replaced with a new one. Any modifications or manipulations to the product are prohibited, as they impair the product safety. **CAUTION:** There is an extremely high danger of injuries here!

**4. Non-use of the knife:** Always secure the blade in such a way that injuries due to cuts are excluded. Store the knife in a secure place.

**5. Care instructions:** Always keep the knife clean and do not expose it to unnecessary humidity to safeguard a long service life.

**CAUTION:** No liability will be assumed for consequential losses. Subject to technical changes and errors! This knife does not belong in the hands of children!

## ACCESSORIES

### BELT HOLSTER S WITH CLIP NO. 9920



What do you do with your cutting tools when you are not actually using them? The MARTOR BELT HOLSTER S is a robust holder that allows you to carry all compact MARTOR cutters as well as our safety scissors at all times. In addition, the compartments are designed to allow you to load different tools: for example you can also carry a pen or a pack of blades. The MARTOR BELT HOLSTER is the ideal place to stow your tools safely when moving from A to B - and have them at hand, as soon as they are required.

### HOLSTER SMALL NO. 9842




This blue plastic HOLSTER is just like the black version, only smaller. Use it to safely store and transport SECUNORM cutters MULTISAFE, MULTISSET, PROFI, PROFI LIGHT, PROFI25 and PROFI40. With this holster on your hip, your cutter will always be within grasping range.

### USED BLADE CONTAINER NO. 9810



You can fill the USED BLADE CONTAINER with the content of your SAFEBOX. Or directly with your used blades. When the box is full, turn the lid until it shuts. Now the box cannot be reopened. The next step is to safely and completely dispose of the filled USED BLADE CONTAINER.

### WALL MOUNT BRACKET USED BLADE CONTAINER NO. 9845

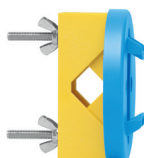

Include it in your order now! With this mounting bracket you can fix your USED BLADE CONTAINER to a central location. Use the clamp and screws and nuts supplied with the product to attach it to either a pipe or a rod.

### SAFEBOX NO. 108000



The SAFEBOX is large enough to store a large number of used blades safely. And at the same time, it is compact enough to carry with you. The two slits are not only used for filling, but also to „shorten“ your snap-off blades. When your SAFEBOX is full, empty it into your USED BLADE CONTAINER.



Value Driven Safety