



TECHNICAL DATA SHEET

SECUNORM MULTISAFE NO. 8152



Automatic blade retraction – a high degree of safety

The automatic blade retraction of the SECUNORM MULTISAFE guarantees a high degree of safety from cut injuries. As soon as you have started to cut, take your thumb off the slider. Then the blade will retract into the handle immediately after leaving the material being cut.



HEAVY-WEIGHT SAFETY KNIFE MADE OF UNPAINTED ZINC. WITH AUTOMATIC BLADE RETRACTION.

Order No. 8152.19

Heavy Metal - unpainted. With trapezoid blade.

The SECUNORM MULTISAFE is a real classic now also available with a unpainted handle. It provides excellent durability thanks to its handle made of zinc and its uncomplicated, robust design. With its notable blade extension, you can cut all standard materials. Should you have any particular requirements, you can re-fit the SECUNORM MULTISAFE with one of our many optional blades.

Robust design

As you can see and feel, the SECUNORM MULTISAFE is extremely stable. And flexible, since you can use a large number of blade shapes. The safety knife is therefore suitable for many cutting applications.

Made of unpainted solid metal

The SECUNORM MULTISAFE is a moulded tool. Made from zinc die-casting. With its unpainted handle, it is especially valued in sensitive sectors.

Slider on top


With the right or with the left hand, you ask? Left and right, is the answer! The metal slider is on top of the handle. And can thus be easily used with either thumb.

2-cutting edge blade

Before you have to change the quality blade, you can turn it over once. This doubles the usage time of the blade – and reduces your energy consumption. Because your SECUNORM MULTISAFE will cut again like new.

Eyelet for fastening

Ever since its introduction the SECUNORM MULTISAFE is equipped with an eyelet for tethering your knife to you or a work station.

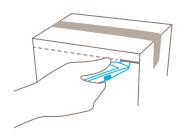



Unscrew the handle and remove the upper half of the handle. Reverse or replace the blade.

PRODUCT FEATURES

Technical features



High safety



Blade change with tool



Very abrasion resistant



Full metal housing



Ergonomic



2-cutting edge blade



Cutting depth



X-ray detectable



For right and left handers



Lanyard hole

Main cutting materials



Cardboard: up to 3-ply



Plastic strapping band



Таре



Slabbing material off a roll



Textile, material





Leather





Felt



Rubber





Carpet



PVC



Installed blade



NO. 5232 0.63 mm, deep-edged

Optional blade



NO. 51 0.63 mm



NO. 165232

0.63 mm, stainless, rounded blade tips, deep-edged



NO. 852

0.63 mm, stainless, TiN-coated





NO. 85233

0.63 mm, 1-sided ground-edge, TiN-coated



NO. 61 0.63 mm



NO. 5634

0.63 mm, rounded blade tips



NO. 5132

0.63 mm, deep-edged



NO. 52

0.63 mm



NO. 8852

0.63 mm, TiN-coated



NO. 54

0.65 mm, carbon steel



NO. 610

0.63 mm, stainless



NO. 63

0.63 mm



NO. 65232

0.63 mm, rounded blade tips, deep-edged



NO. 5233

0.63 mm, 1-sided ground-edge



NO. 85232

0.63 mm, deep-edged, TiN-coated



NO. 54065

0.65 mm, carbon steel



NO. 56 0.63 mm



NO. 60

0.63 mm



Training video



Technical data sheet



Consulting service

PRODUCT AND PACKAGING DETAILS

Order No.	NO. 8152.19	Packaging unit	1 in single unit box
Knife size (L x W x H)	142 x 17 x 38.5 mm	Size Single unit box	154 x 38 x 22.0 mm
Weight knife	150.0 g	Weight single unit box	163.0 g
Basic material	Zinc	EAN Code single unit box	4002632802812
Cutting depth	22 mm	Quantity in outer pack	10 knives
		Size outer pack	115 x 80 x 160.0 mm
		Weight outer pack	1680.0 g
		EAN Code outer pack	4002632852817
		Customs tariff number	82119300

SAFETY CERTIFICATE

Date of issue	07.12.2020	
Certification	GS certificate NO. 180699-7246-55094-	
	2020/1	

Certificates and awards



SAFETY ADVICE

To ensure that you use your new MARTOR knife safely and most effectively, please read and note the following user-instructions. Please keep the written guide in a safe place so that you can access it at any time.

- 1. General application instructions: Please always use the product carefully for manual cutting work only and not for any purposes other than those that are intended. Please take the correct handling and the proper use of the knives into account in this regard. As an additional safety measure, we recommend the wearing of safe gloves.
- 2. Special application instructions to avoid the danger of injuries: Always take great care when handling the product. Before first use, familiarise yourself with the safety technology and how it works. Before every further use, check the knife for proper functioning. Only use cutting tools that are in perfect condition with sharp, clean and undamaged MARTOR blades. Also make sure that the knife's operation is not impaired by the material to be cut or by dirt or particle deposits around the blade. CAUTION: The blade is sharp and can result in serious and deep cuts. Therefore, never reach into the blade! Do not place your free hand in the line of cutting and never cut directly towards you.
- **3. Replacement of spare parts:** Replace any blades that become dull at the right time! Use only the replacement blades from MARTOR for this purpose. Dispose of old blades in a proper fashion. They should not be placed in a waste paper bin, as this poses a considerable danger of injuries. Never perform any repairs yourself. If the knife shows signs of aging or any other wear, e.g. which impair safety features, blade changing or usage, the knife must be taken out of service and replaced. Do not modify this product in any way. Modifications of any kind may impair product safety. CAUTION: The risk of injury caused by manipulation of this product is extremely high.
- **4. Non-use of the knife:** Always secure the blade in such a way (depending on product type) that injuries due to cuts are excluded. Store the knife in a secure place.
- **5. Care instructions:** To guarantee a long service life, always keep the knife clean and do not expose it to unnecessary soiling and humidity.

CAUTION: No liability will be assumed for consequential losses. Subject to technical changes and errors! This knife does not belong in the hands of children!

BELT HOLSTER S

NO. 9920



BELT HOLSTER XXL

NO. 9924



HOLSTER SMALL NO. 9842



TOOL RETRACTOR NO. 9960



USED BLADE CON-TAINER NO. 9810



WALL MOUNT BRACKET USED BLADE **CONTAINER**



SAFEBOX NO. 108000

NO. 9845



The SAFEBOX is large enough to store a large number of used blades safely. And at the same time, it is compact enough to carry with you. The two slits are not only used for filling, but also to "shorten" your snap-off blades. When your SAFEBOX is full, empty it into your USED BLADE CONTAINER.



What do you do with your cutting tools when you are not actually using them? The MARTOR BELT HOLSTER S is a robust holder that allows you to carry all compact MARTOR knives as well as our safey scissors at all times. In addition, the compartments are designed to allow you to load different tools: for example you can also carry a pen or a pack of blades. The MARTOR BELT HOLSTER is the ideal place to stow your tools safely when moving from A to B - and have them at hand, as soon as they are required.

The BELT HOLSTER XXL is a real space miracle. With it, you not only transport your MARTOR cutting tools safely from A to B. All other work utensils are always within reach. The BELT HOLSTER XXL has two large compartments: the inner one is lockable, the outer one is equipped with a knife safety device. You are also well equipped when it comes to carrying options. Choose flexibly between strap, Velcro fastener and

This blue plastic HOLSTER is just like the black version, only smaller. Use it to safely store and transport for example for the SECUNORM 500 or the SECUNORM 300. With this HOLSTER on your hip, your knife will always be within grasping range.

The TOOL RETRACTOR protects your cutting tool from loss and from falling down. Its core is the heavy-duty Kevlar cord that can be extended up to 90 cm. As soon as you let go of your knife, it is returned to you via the flexible cord. Your hands are free for other activities – the knife always remains at hand. The carabiner is designed for your belt loop, the steel cord at the other end fits through the eyelet of your cutting tool.

You can fill the USED BLADE CONTAINER with the content of your SAFEBOX. Or directly with your used blades. When the box is full, turn the lid until it shuts. Now the box cannot be reopened. The next step is to safely and completely dispose of the filled USED BLADE CONTAINER as normal waste.

Include it in your order now! With this mounting bracket you can fix your USED BLADE CONTAINER to a central location. Use the clamp and screws and nuts supplied with the product to attach it to either a pipe or a rod.

04/04



Distributed by: SAURYA HSE PVT LTD

C-112A, Kailash Business Park, Veer Sawarkar Marg, Vikhroli (West), Mumbai – 400079, Maharashtra, India T: +91 022 4065 5555 | E: commercial@sauryahse.com | W: www.sauryahse.com